

TROUBLESHOOTING:

The main unit may display "----" if the signal is being interrupted by outside interference. In most cases, the unit will re-sync with the remote sensor on it's own. It may also help to bring the remote sensor closer to the main unit to re-sync the main unit and the remote sensor. However, should this condition continue to occur, be sure to check the following:

- A. The batteries may be low, replace and repeat setup procedure.
- B. The sensor may be placed outside of the effective transmission range (100 feet).
- C. The sensor may have outside interference that is preventing transmission.
(metal surfaces, other electronic devices, etc.). The sensor may need to be moved to another location if interference continues.

ACURITE®

Do not return product to retail store.
For Technical Assistance and product return information,
please call Chaney Instrument Co. direct at:
877-221-1252

LIMITED WARRANTY – INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

www.chaneyinstrument.com
Tel: 877-221-1252
Made in China

Chaney Instrument Company
965 Wells Street
Lake Geneva, Wisconsin 53147

Battery Installation and Setup:

For installation, insert batteries in the main unit first, then install batteries in the remote sensor unit second.

To install batteries in the remote sensor unit, refer to figure 1 on page 1 for visual reference. Gently open the case along the seam separating the front and back halves. Insert two "AAA" (1.5v) batteries according to the diagram in the battery compartment.


Next, select a channel to use with the channel selection switch. You may use up to 3 remote sensors with the 00592W and the 00593W main units. Your new RF remote sensor is built with random security code technology. The main unit will learn the random security code of the remote sensor and will be registered without being interfered with by a neighbor who may be using the same type of sensor under the same channel setting.

Press the "TX" button located above the battery compartment to send a signal to the main unit. The main unit will then receive the signal from the remote sensor and log the random signal code in as the same channel you selected on the remote sensor.
To link additional wireless remote sensor units to the main unit, repeat the above steps

Fahrenheit or Celsius Setup:

To select between Fahrenheit or Celsius temperature display on the remote sensor display, push the "C/F" button located inside the case above the battery compartment.

Mode Selection:

The mode button allows you to select between different display modes on the remote sensors built-in display. The default display mode when you first install the batteries is to show the temperature. You may press the "MODE" button once to change to humidity display, or press the "MODE" button a third time to move to an alternating display which shows the temp. and humidity in an alternating format. A small icon will appear on the screen () to signify that you are in the alternating display mode. If you press the "MODE" button a fourth time, you will return back to the default temperature display mode.


CLOSE THE CASE BY PRESSING THE FRONT AND BACK TOGETHER FIRMLY.

Replacing Batteries:

When replacing batteries in the remote sensor unit, the channel logged in the main unit must be cleared. Follow the appropriate main unit instructions on channel selection. To reset the entire unit, remove the batteries in the main unit and the remote sensor(s) and the registered channel(s) will be erased. Follow the thermometer set-up procedures as outlined in the appropriate main unit instruction manual and this remote sensor manual.

ACURITE®

00984 Wireless Thermometer & Hygrometer
Remote Sensor

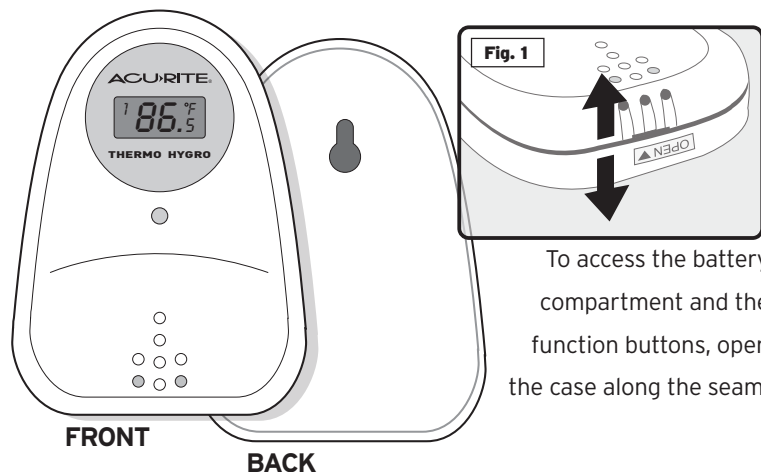

Acu-Rite instruments have been designed and engineered to provide accurate and reliable Measurements. Please read the instructions thoroughly before setting up your wireless thermometer.

The remote sensor is designed to stand or hang. For wall mounting, use the enclosed screw to mount to the desired surface. Use the slot on the back of the case to mount the remote sensor to the surface.


Remote Sensor Features:

- The remote sensor can transmit up to 100 feet
- The remote sensor has a weather resistant case. Keep the unit out of direct sunlight and direct weather conditions. This will extend the life of the unit.
- The remote sensor has a temperature measurement range of **-4°F to 122°F / 0°C to 50°C** and a humidity measurement range of **20% to 99%.**

NOTE: Severe cold weather can cause alkaline batteries to freeze and stop functioning properly. Lithium batteries are required for temperatures below -12°F / -24°C.

1

ACURITE®

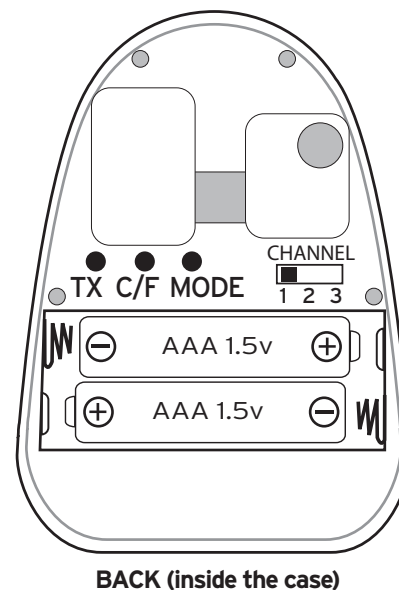

Additional Remote Sensor Placement Suggestions:

Additional sensors can be purchased separately, Acu-rite model #00984

- Outside your home or place of business
- Wine cellars
- In the garage
- Childrens room
- Gardens or greenhouses
- Any location that remote temperature readings are beneficial

To order more sensors by phone, please call Klock-it at 800-556-2548